PH-291 Physics Lab Professor Corn-Agostini Fall 2022

Lab # 2: Index of Refraction

Your Name: Perla Berkovitz
Your Lab Section:PH-291-E
Your Lab Instructor: Professor Corn-Agostini
Your Lab Partner's Name: Sharon Sitt
Read and sign Academic Integrity Statement:
I hereby attest that I have not given or received any unauthorized assistance on this assignment.

Sign here

Grading Rubric

SECTION	POINTS	GRADE	COMMENTS
Purpose	1		
Data	3		
Explanation of Errors	3		
Calculations	3		
Results	2		
Conclusion	1		
Answers	2		
Total	15		

Contents

1	Purpose	2
2	Data	3
3	Calculations	5
4	Results	8
5	Conclusion	10

1 Purpose

In this lab, Pfund's Method and Snell's Law will be used to determine the index of refraction of an unknown liquid. Two methods will be used to find this index of refraction, the first utilizing Pfund's Method, while the second uses Snell's Law. The index of refraction of the glass petri dish is determined via Pfund's Method. This then allows us to proceed with both methods. As light is refracted through a medium, a small circular region is observed, surrounded by a darker region with a radius that can be used to calculate the unknown index of refraction via Pfund's Law. In the second method, the incident and reflected angles of the light are measured and plugged into Snell's Law. We can compare the two calculated values to determine the unknown substance.

2 Data

Measurement	Thickness (mm)
1	1.695
2	1.995
3	1.990
4	2.095
5	1.930
6	1.995

Instrumental Error: 0.005 mmRandom Error: 0.055 mmThickness: $1.950 \pm 0.055 \text{ mm}$

Table 1: Petri Dish Thickness

Measurement	Thickness (mm)	
1	7.98	
2	8.86	
3	8.24	
4	7.60	
5	8.16	
6	7.66	
Instrumental Error: 0.02 mm		

Random Error: 0.19 mm

Thickness: $8.08 \pm 0.19 \text{ mm}$

Table 2: Ring Diameter Without Liquid

Measurement	Diameter (mm)
1	19.68
2	19.60
3	19.58
4	19.58
5	19.56
6	19.62

Instrumental Error: 0.02 mm

Random Error: 0.017 mm

Thickness: $19.60 \pm 0.02 \text{ mm}$

Table 3: Ring Diameter With Liquid

Measurement	Incident Angle	Refracted Angle		
1	50.0°	28.0°		
2	28.0°	38.0°		
3	36.0°	20.0°		
4	17.0°	40.0°		
5	43.0°	27.0°		
6	28.0°	39.0°		
Instrumental Error: 0.5°				

Table 4: Snell's Law

3 Calculations

Part A: Pfund's Method

1. Index of Refraction $(n_{\rm glass})$

$$n_{\rm glass} = \frac{\sqrt{d^2 + 16t^2}}{d}$$

Before the index of refraction of the liquid (n_{liquid}) could be found, we must first find the index of refraction of our petri dishes (n_{glass}) . Here, d represents the diameter of the ring of light reflected by the glass and t represents the thickness of the petri dish. When solving for n_{glass} mean values of d and t were used. The error of the mean values were propagated through this calculation using the following equations.

Error Propagation:

1.1 Partial Derivative of Eq. 1 w.r.t d

$$\frac{\partial n_{\text{glass}}}{\partial d} = -\frac{16t^2}{d^2\sqrt{d^2 + 16t^2}}$$

1.2 Partial Derivative of Eq. 1 w.r.t t

$$\frac{\partial n_{\text{glass}}}{\partial t} = \frac{16t}{d\sqrt{16t^2 + d^2}}$$

Each of these partial derivatives are used in the final calculation of the total error associated with n_{glass} . Because d and t are both independent variables we use the following equation to find the total error.

1.3 Total Error Associated with the Index of Refraction (n_{glass})

$$\delta n_{\text{glass}} = \sqrt{\left(\frac{\partial n_{\text{glass}}}{\partial t} \delta t\right)^2 + \left(\frac{\partial n_{\text{glass}}}{\partial d} \delta d\right)^2}$$

The error associated with the mean values were calculated (shown in Table 5). This provides our final error associated with (n_{glass}) .

2. Index of Refraction (n_{liquid})

$$n_{\text{liquid}} = \frac{n_{\text{glass}}d}{\sqrt{d^2 + 16t^2}}$$

We proceed to calculate (n_{liquid}) , which relies on (n_{glass}) (calculated above), the diameter d of the first ring reflected by the liquid, and the thickness of the petri dish t. The total error of (n_{liquid}) is found using the following equations.

5

Error Propagation:

2.1 Partial Derivative of Eq. 2 w.r.t d

$$\frac{\partial n_{\text{liquid}}}{\partial d} = \frac{16n_{\text{glass}}t^2}{\left(d^2 + 16t^2\right)^{\frac{3}{2}}}$$

2.2 Partial Derivative of Eq. 2 w.r.t t

$$\frac{\partial n_{\text{liquid}}}{\partial t} = -\frac{16dn_{\text{glass}}t}{(16t^2 + d^2)^{\frac{3}{2}}}$$

2.3 Partial Derivative of Eq. 2 w.r.t $n_{\rm glass}$

$$\frac{\partial n_{\text{liquid}}}{\partial n_{\text{glass}}} = \frac{d}{\sqrt{16t^2 + d^2}}$$

Each of these partial derivatives are used in calculating the total error in the following equation. All of the variables $((n_{\text{glass}}), d, \text{ and } t)$ are independent, which allows us to use the same process as above (Equation 1.3).

2.4 Total Error Associated with the Index of Refraction (n_{liquid})

$$\delta n_{\rm liquid} = \sqrt{\left(\frac{\partial n_{\rm liquid}}{\partial t} \delta t\right)^2 + \left(\frac{\partial n_{\rm liquid}}{\partial d} \delta d\right)^2 + \left(\frac{\partial n_{\rm liquid}}{\partial n_{\rm glass}} \delta n_{\rm glass}\right)^2}$$

As in Equation 1.3, this equation gives us the total error associated with (n_{liquid}) , shown in the results section (Table 6).

Part B: Snell's Law

3. The Law of Refraction (Snell's Law)

$$n_1 \sin \theta_1 = n_2 \sin \theta_2 \Rightarrow n_2 = \frac{n_1 \sin \theta_1}{\sin \theta_2}$$

Part B of the experiment requires us to employ the Law of Refraction, also known as Snell's Law, to find the index of refraction of the liquid, which we'll refer to as n_2 . In this equation, θ_1 refers to the incident angle (the angle at which the light enters the medium) and θ_2 refers to the refracted angle (the angle at which the light exits the medium). The final error associated with n_2 is given by the following process.

Error Propagation

3.1 Partial Derivative of Eq. 3 w.r.t θ_1

$$\frac{\partial n_2}{\partial \theta_1} = \frac{n_1 \cos(\theta_1)}{\sin(\theta_2)}$$

6

3.2 Partial Derivative of Eq. 3 w.r.t θ_2

$$\frac{\partial n_2}{\partial \theta_2} = -\frac{n_1 \sin(\theta_1) \cos(\theta_2)}{\sin^2(\theta_2)}$$

Each of these partial derivatives are used in the following equation to find the total error associated with n_2 . Because n_1 was a given value of the index of refraction of air, there is no error associated with that measurement, so it will not factor into the total error. θ_1 and θ_2 are dependent variables, which allows us to use the following equation to find the total error.

3.3 Total Error Associated with the Index of Refraction (n_2)

$$\delta n_2 = \left| \left(\frac{\partial n_2}{\partial \theta_1} \delta \theta_1 \right) \right| + \left| \left(\frac{\partial n_2}{\partial \theta_2} \delta \theta_2 \right) \right|$$

The total error was calculated using this equation for the measured angles. The mean of the calculated n_2 values alongside its error value (δn_2) provides our final value of the index of refraction of the liquid.

4. Sample Mean

$$\bar{x} = \frac{\sum_{i=1}^{n} x_i}{n}$$

where x_i represents each value and n is the total number of entries

5. Sample Standard Deviation

$$S_x^2 = \frac{1}{N_x - 1} \sum_{i=1}^{N_x} (x_i - \bar{x})^2$$

where S_x^2 is the sample variance and S_x is the sample standard deviation for each sample set. N_x is the number of samples in the set.

6. Standard Deviation of the Mean (SDOM)

$$\sigma_x = \frac{S_x}{\sqrt{N_x}}$$

This also provides us with the random error of each sample set.

4 Results

$n_{ m glass}$	$\frac{\partial n_{\rm glass}}{\partial t}$	$\frac{\partial n_{\rm glass}}{\partial d}$	Error of $n_{\rm glass}$		
1.39	0.34	-0.08	0.08		
$n_{ m glass}: 1.39 \pm 0.08$					


Table 5: $n_{\rm glass}$ Final Value by Pfund's Method

$n_{ m liquid}$	$\frac{\partial n_{\text{liquid}}}{\partial t}$	$\frac{\partial n_{\text{liquid}}}{\partial d}$	$\frac{\partial n_{\text{liquid}}}{\partial n_{\text{glass}}}$	Error of $n_{\rm glass}$	Error of n_{liquid}
1.29	-0.09	0.009	0.93	0.08	0.26
$n_{ m liquid}: 1.29 \pm 0.26$					

Table 6: n_{liquid} Final Value by Pfund's Method

$n_{ m liquid}$	$\frac{\partial n_{\text{liquid}}}{\partial \theta_1}$	$\frac{\partial n_{\text{liquid}}}{\partial \theta_2}$	Error of n_{liquid}		
1.62	1.61	-2.19	0.03		
$n_{ m liquid}: 1.62 \pm 0.03$					

Table 7: n_{liquid} Final Value by Snell's Law

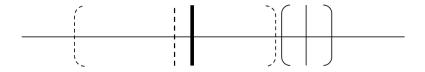

Dashed = Method 1 (Pfund's Method) Solid = Method 2 (Snell's Law) Bold = Accepted Value

Figure 1: Number Line Indicating Error Bounds and Accepted Values

Using Figure 1, we can see that while the index of refraction calculated via Pfund's Method had a greater error, it was closer to the accepted value of the index of refraction of water, which is 1.33. The accepted index of refraction lies within the error bounds of the Pfund's Method calculation. Snell's method provided an index of refraction of 1.62 ± 0.03 which does not agree with the accepted value. This can mainly be attributed to human error in measuring the incident and refracted angles. When measuring our angles, we misread our protractor as having increments at every 1°, as opposed to every 0.5° . This provided us with an instrumental error of 0.5° , as opposed to 0.25° . Given that Pfund's Method is an application of Snell's Law, both methods should produce similar results if error can be further reduced.

The error introduced in Pfund's Method stems from multiple areas. Firstly, the petri dish may not have had a uniform thickness, providing different thickness readings on the

micrometer. Then, the laser may not have been pointed perfectly vertically. Pfund's method relies on the laser making an angle of $\frac{\pi}{2}$ with the horizontal. Lastly, error is introduced in measuring each of the rings. The method of measuring required eyeballing where the ring lined up on the polar grid and then measuring the polar grid on a separate piece of paper. Measurements were taken using a pair of vernier calipers, which have pointed ends where the measurements are taken. These tended to make indentations in the polar grid paper which the calipers would slide into when taking other measurements.

The second method using Snell's Law had less error associated with the final index of refraction relative to the value found by Pfund's Method. The calculated index of refraction is 1.62 ± 0.03 . While tracing the petri dish onto our surface, the polar grid on the bottom of the dish caused us to trace a larger circle than the diameter of the petri dish. Then, when placing the pins along the path of the laser, the laser may have been nudged out of position. This would affect the accuracy of our measured angles. The center of the circle may also have been misplaced, as it is found using the perpendicular bisectors of two cords. These perpendicular bisectors may not have been exactly perpendicular. This would affect the measurements taken for our angles, and in turn affect our index of refraction.

5 Conclusion